


# Neu Tree wall decal

This special instruction sheet is a supplement to the general application instructions sheet, also included in this order . Please review this document for general application guidelines. The Neu Tree decal come in pieces for easier application. Use the sheet diagram below to identify decal pieces with the wall diagram/installation instructions on the back.


**Step 1: Preparation** 

This is what you get:

#### **Sheets**

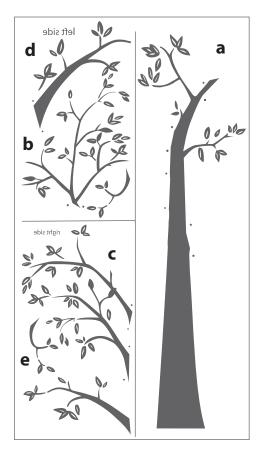

#### This is how it will look when done.

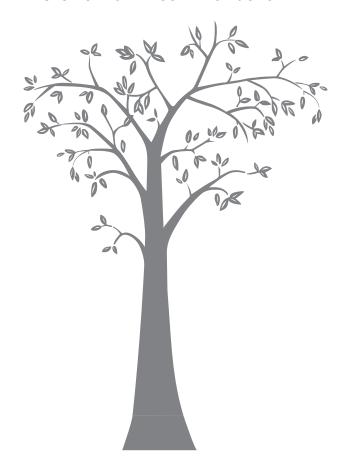

#### Step 2: Placement

### Use in conjunction with general instructions for application tips.

## This Set contains: decal panels for easy

application

Finished Dimensions: 88" h x 65" w

**NOTE:** Large solid decal pieces do not contain a clear top sheet. This is only necessary when there are a lot of cutouts in the decal, to carry the decal to the wall stiffly.


Remove only a few inches of backing at a time.

**Caution:** Take care not to allow decal adhesive to stick to itself.


Vinyl sticks hard to other vinyl!




Start with piece (a) and use bottom edge of wall to guide placement. Remove a few inches of backing from the bottom of decal, so that a strip of decal is exposed. Make a crease in the backing at fold so it doesnt lay back onto decal back.

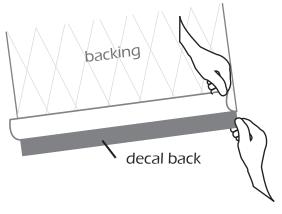


Pull backing up to expose more of the adhesive, while smoothing with your other hand in an upward and then sideways motion.

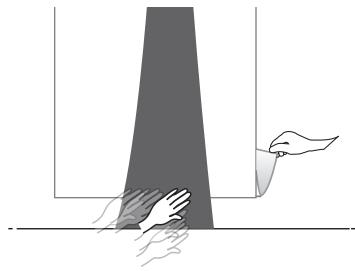


Place piece (b) as shown, matching up the square shaped alignment dots to achieve the correct positioning. You can also adjust the positioning how you like to achieve the look you want. Overlap edges slightly.

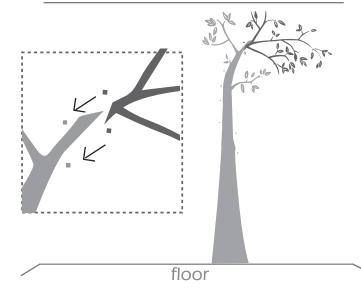


Place piece (d) as shown, lining up the star-shaped alignment dots to achieve the correct positioning. Overlap edges slightly.

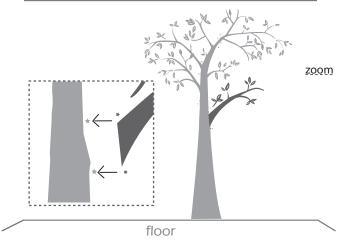

Place bottom of piece (a), at the base of the wall. and smooth down. Then remove backing a few inches at a time, and smooth decal down each time. Once the decal is in place, squeegee it down to ensure it is adhered well to the wall, and remove the clear top sheet.

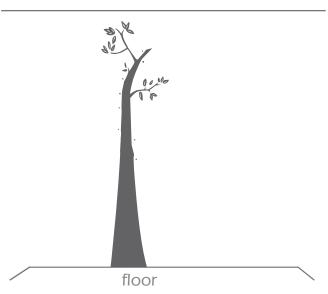

Place piece (c) as shown, lining up the round alignment dots to achieve the correct positioning. Overlap edges slightly.

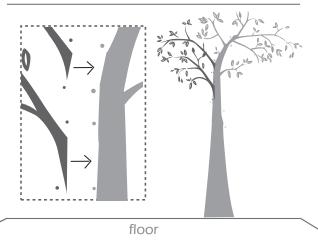

Place piece (e) how you like (there are no alignment dots for this piece). Overlap edges slightly.

